

FIG. 1

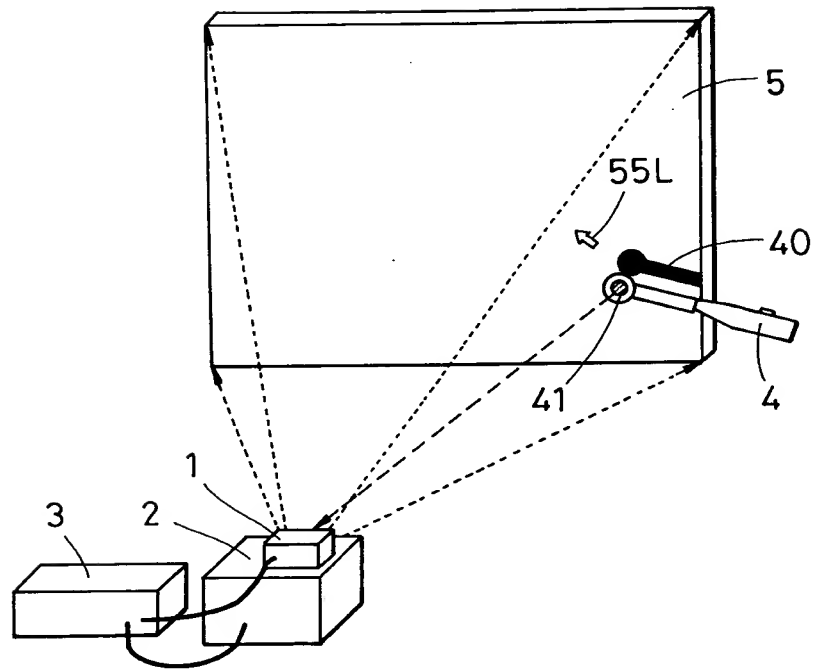


FIG. 2

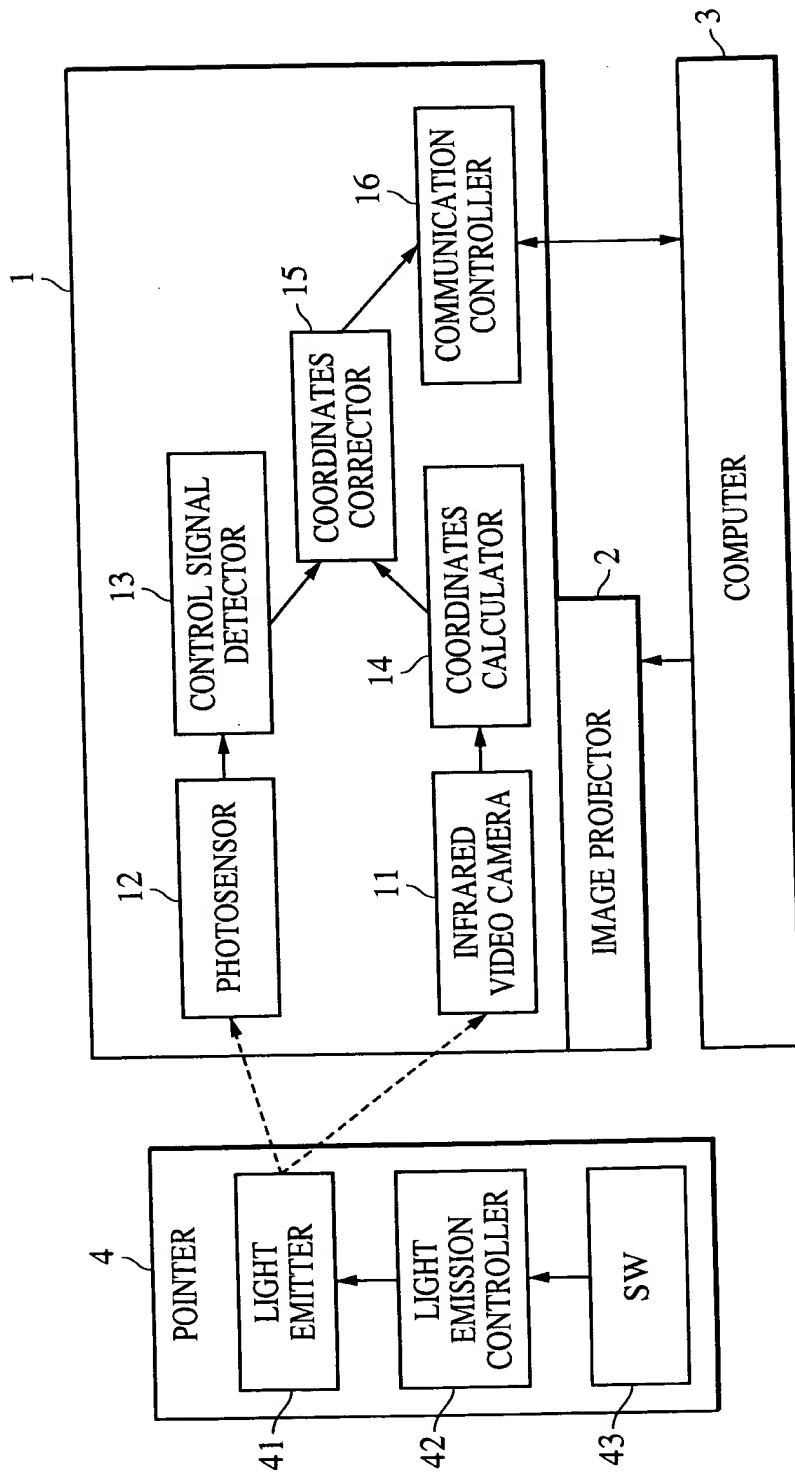


FIG. 3


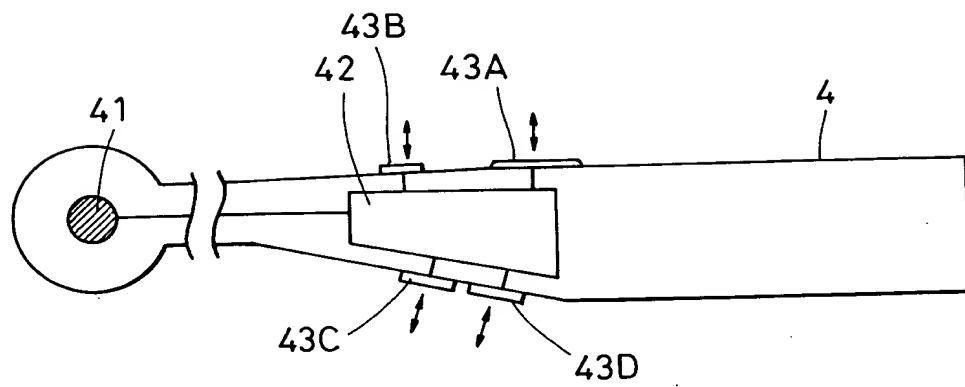


FIG. 4

SWITCH A	SWITCH B	SWITCH C	SWITCH D	EMISSION	PEN DOWN	PEN BUTTON	CURSOR
x	x	-	-	OFF	OFF	OFF	-
o	x	x	x	ON	OFF	OFF	-
o	x	o	x	ON	ON	OFF	-
o	x	x	o	ON	OFF	ON	-
o	x	o	o	ON	ON	ON	-
-	o	o	x	ON	OFF	OFF	LEFT
-	o	x	o	ON	OFF	OFF	RIGHT

FIG. 5

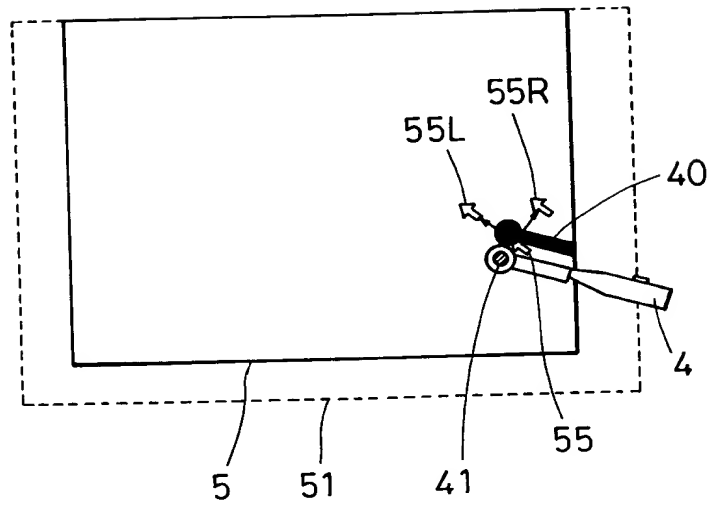

6/17

FIG. 6A

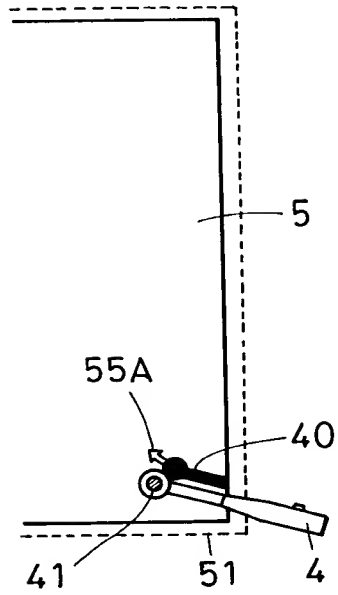


FIG. 6B

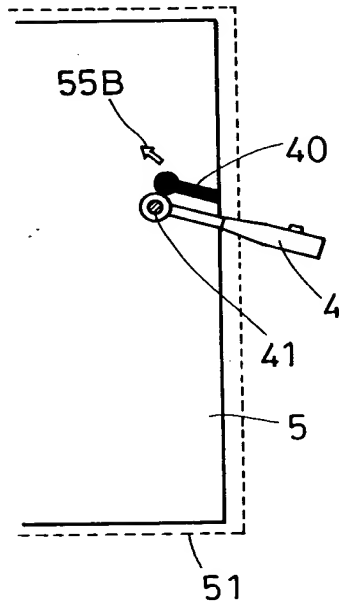


FIG. 7

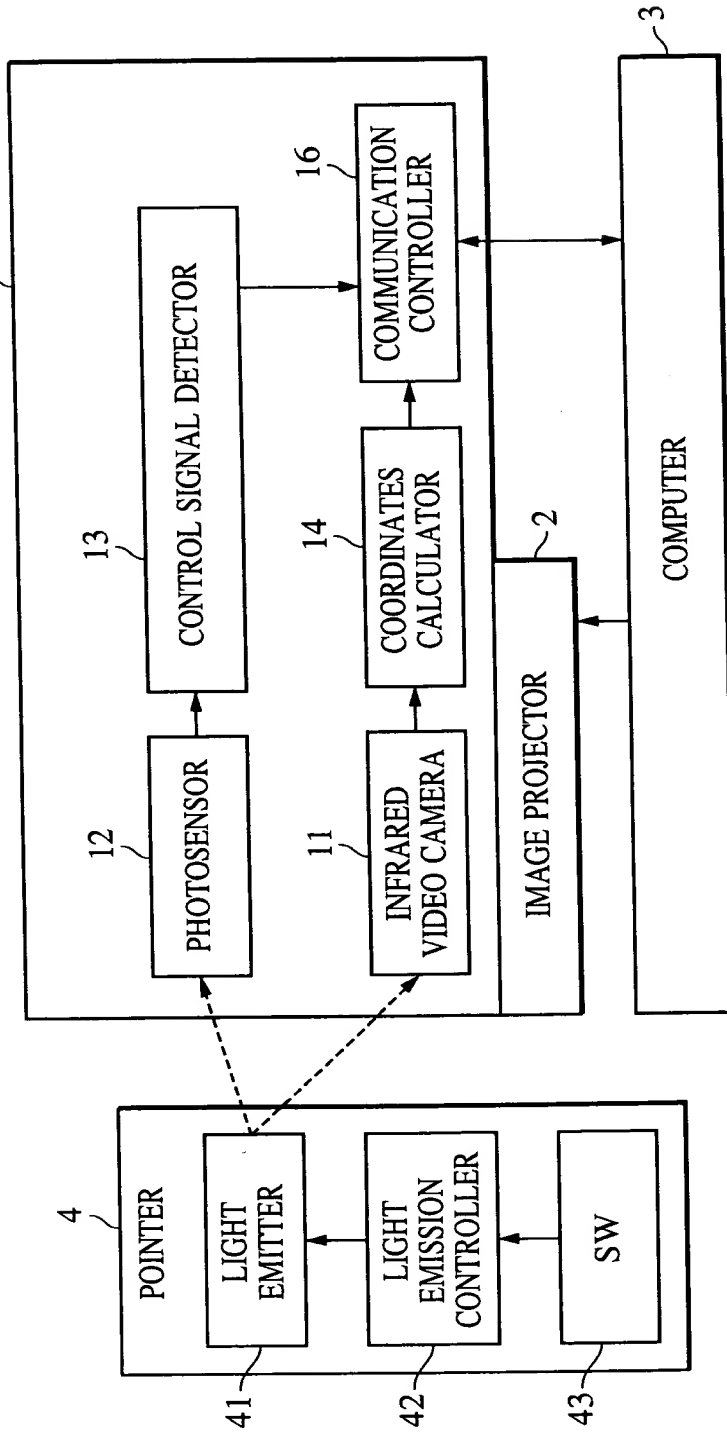


FIG. 8

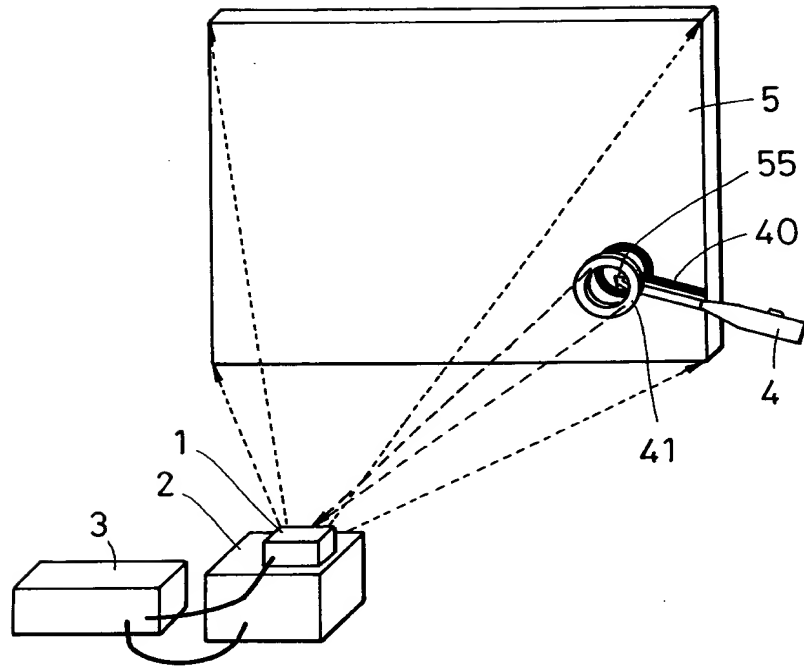


FIG. 9

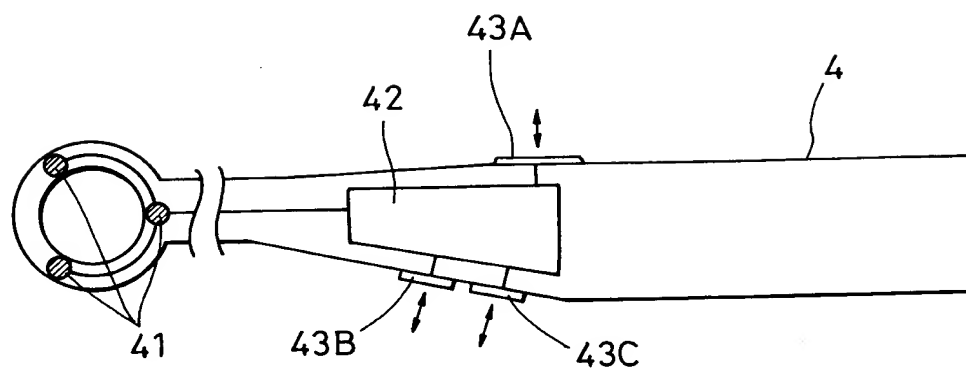


FIG. 10

SWITCH A	SWITCH B	SWITCH C	EMISSION	PEN DOWN	PEN BUTTON
X	-	-	OFF	OFF	OFF
O	X	X	ON	OFF	OFF
O	O	X	ON	ON	OFF
O	X	O	ON	OFF	ON
O	O	O	ON	ON	ON



FIG. 12

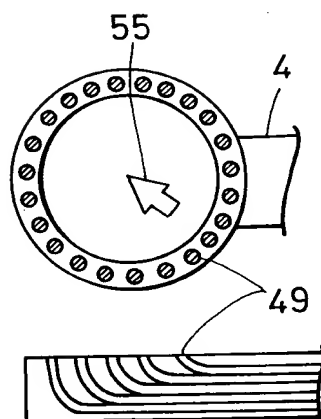


FIG. 13

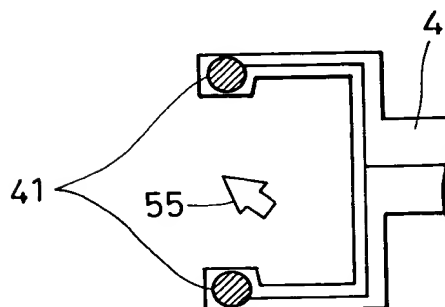


FIG. 14

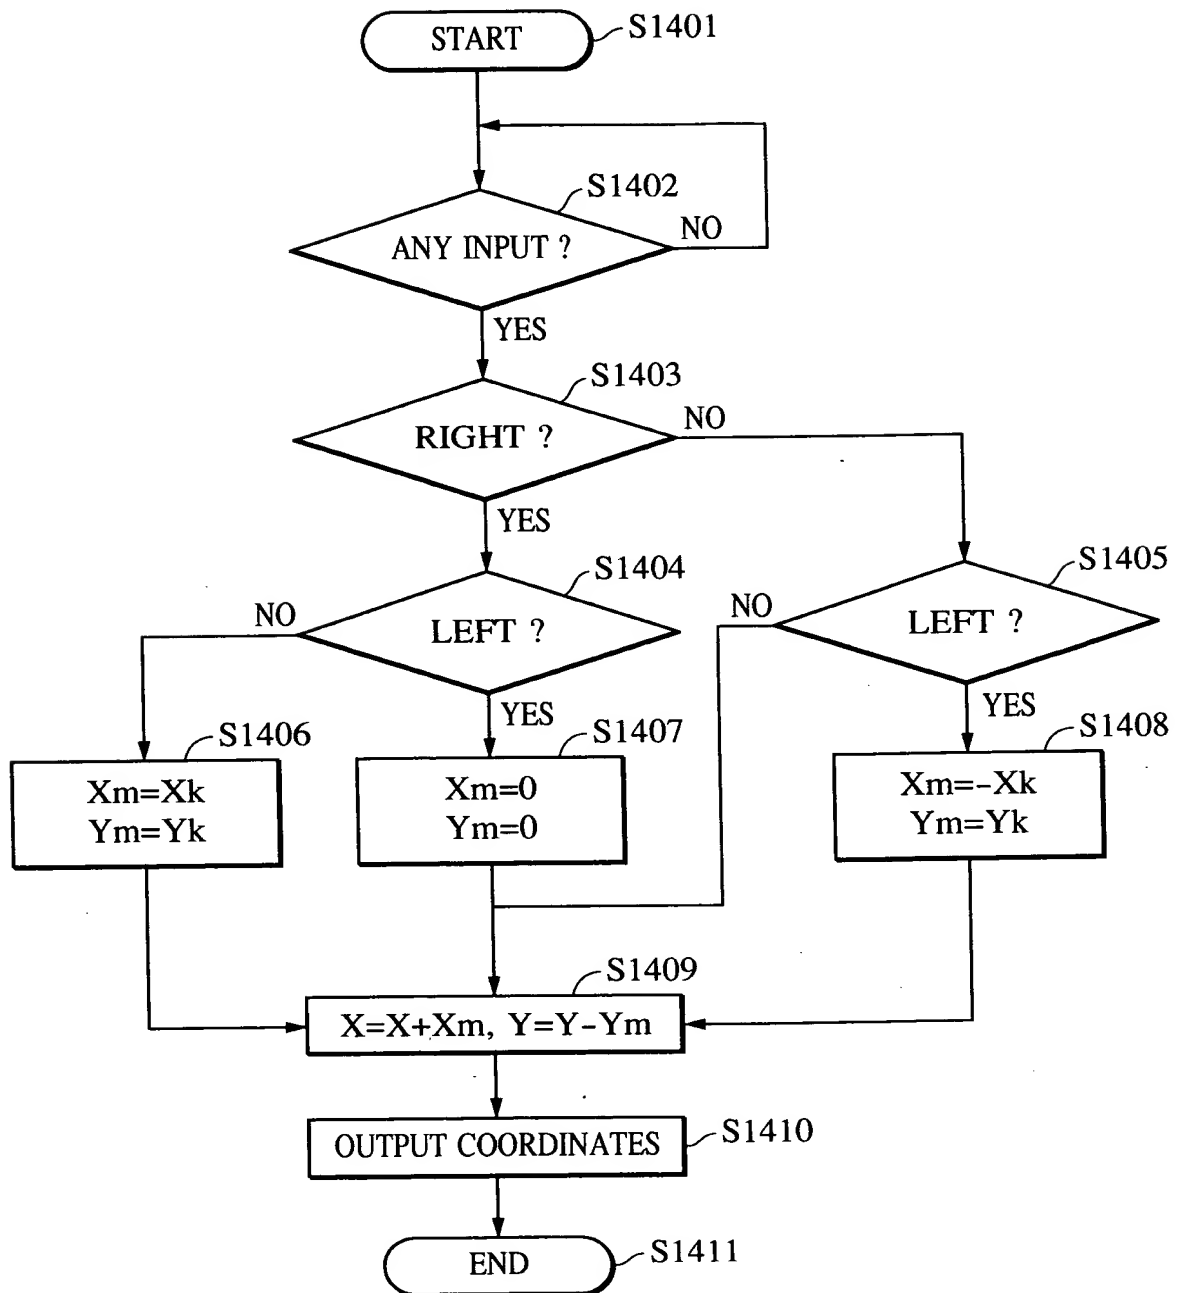


FIG. 15

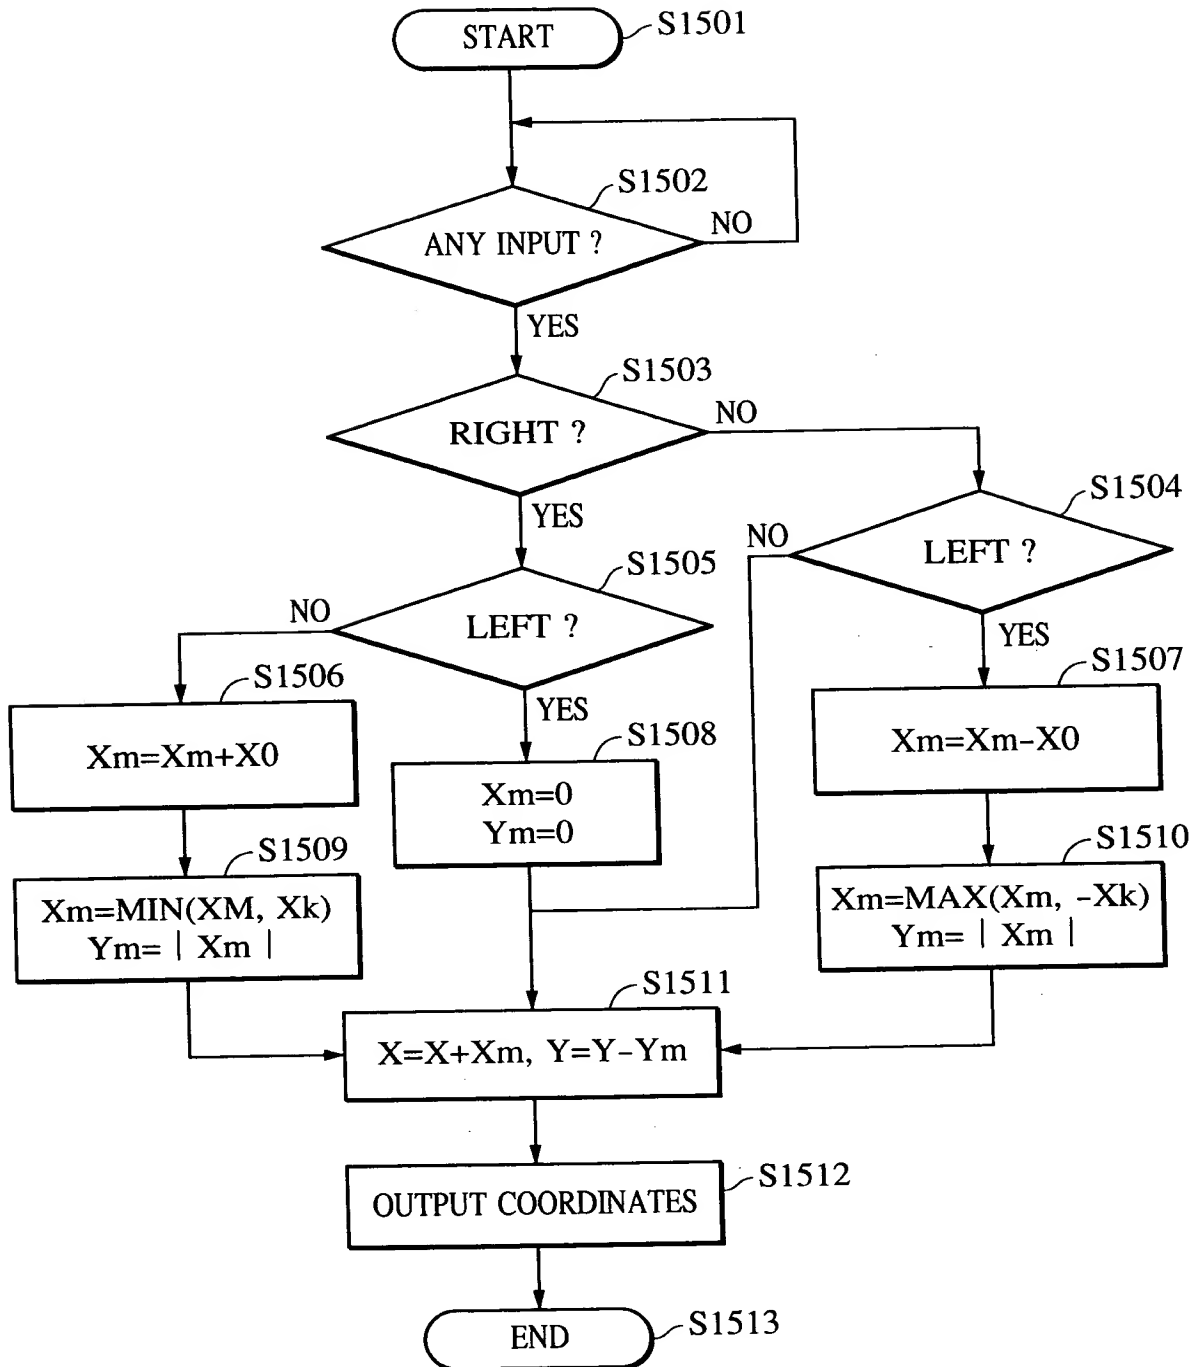


FIG. 16

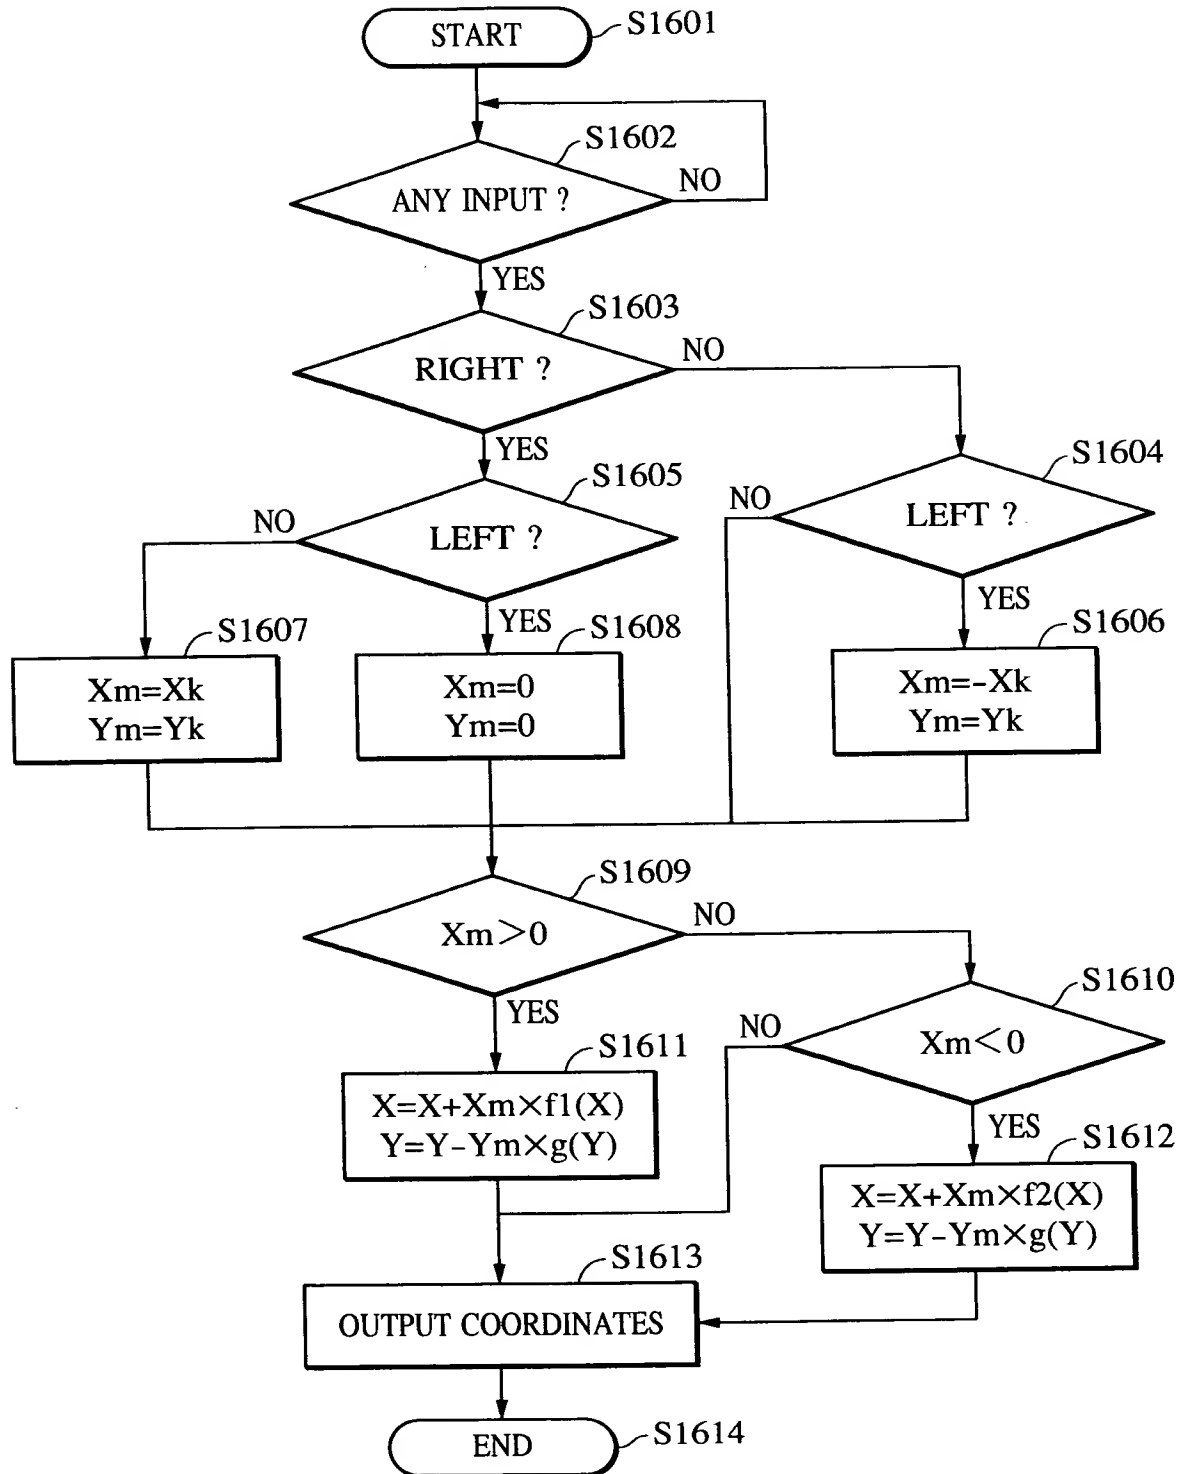


FIG. 17

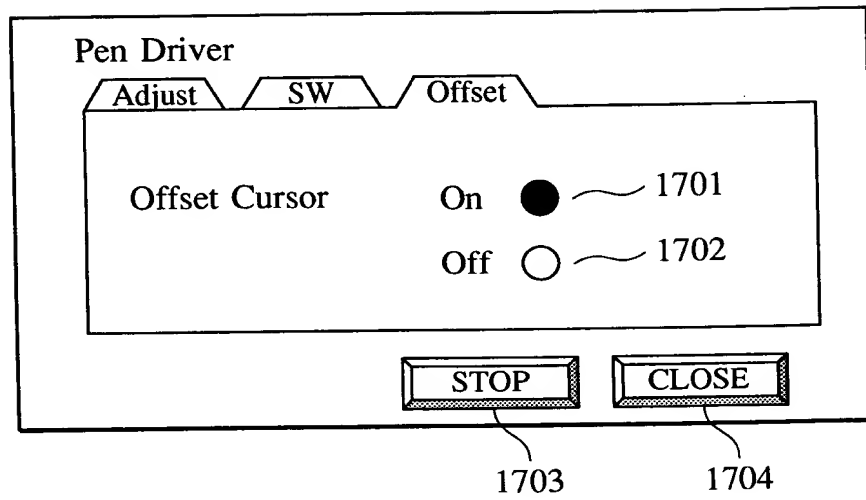


FIG. 17

FIG. 18

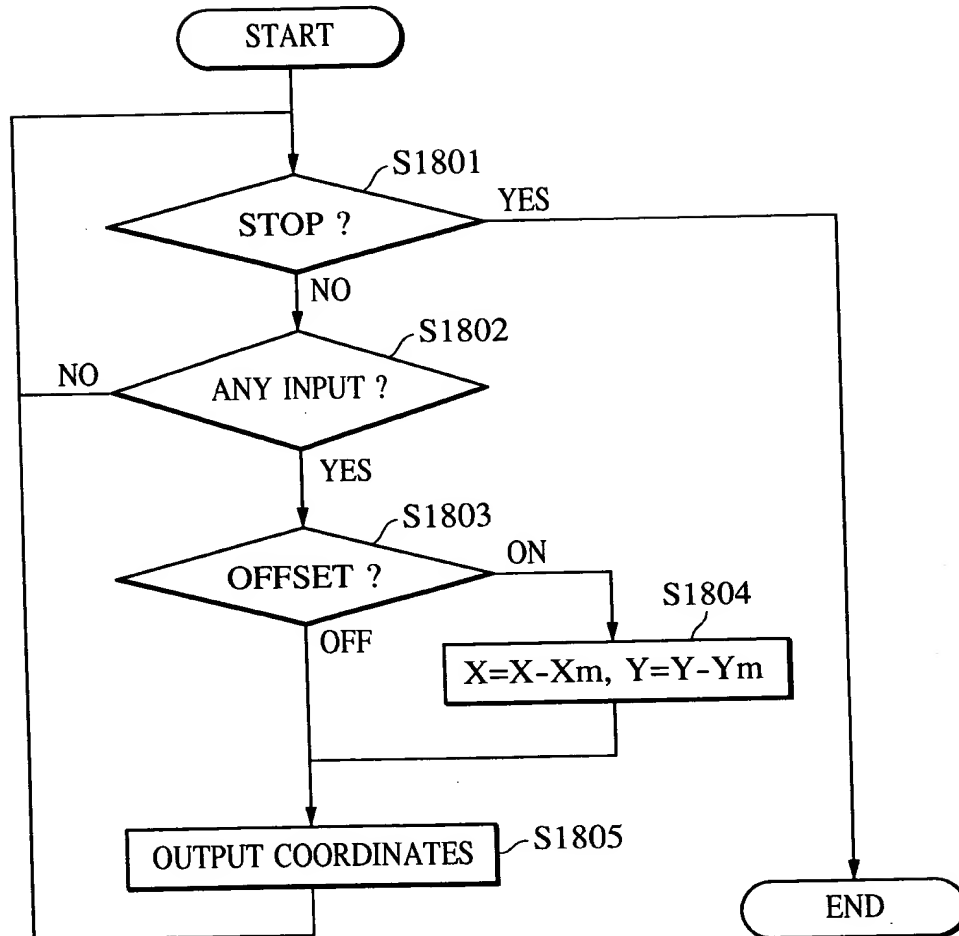


FIG. 19

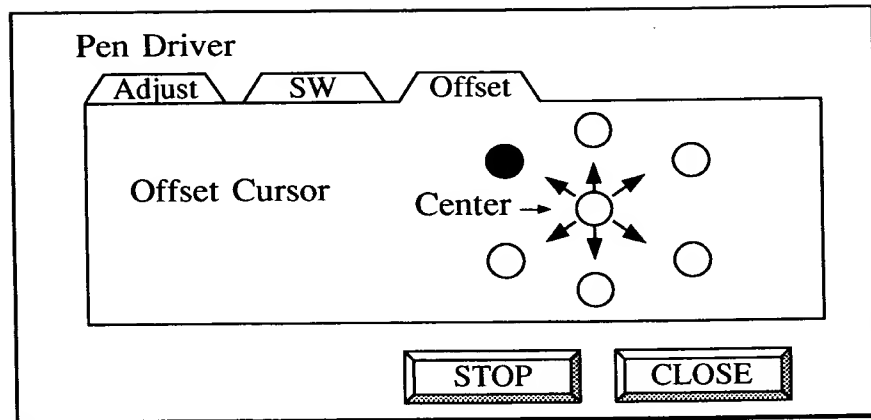


FIG. 19